

REPLACEMENT PARTS GUIDE

5E Series Tractors - 5060E, 5070E, 5078E (300101-), 5080E, 5090E (300101-), 5060EN, 5080EN (South America Edition)

CAB



RECIRCULATION AIR FILTER
[RE195491](#) (5060E, 5070E, 5078E, 5080E, 5090E)
 Clean every 250 hours, 500 hours and annually.



FRESH AIR FILTER
[RE198488](#) (5060E, 5070E, 5078E, 5080E, 5090E)
 Clean every 250 hours, 500 hours and annually.

ACTIVATED CARBON AIR FILTER
[SJ14288](#) (5060E, 5070E, 5078E, 5080E, 5090E)
[SJ28834](#)
 Replace after every 250 hours.

HYDRAULIC



OIL FILTER
[SJ10672](#) (5060E, 5070E, 5078E, 5080E, 5090E)
 Replace initially after 100 hours and after every 750 hours and every 1500 hours.

TRANSMISSION



OIL FILTER
[RE45864](#) (5060E, 5070E, 5078E, 5080E, 5090E)
[SJ2883](#)
 Replace initially after 100 hours and after every 750 hours and every 1500 hours.



ENGINE



PRIMARY AIR FILTER
[SU55720](#) (5060E, 5070E, 5080E, 5060EN, 5080EN)
[RE253518](#) (5090E)



SECONDARY AIR FILTER
[SU29301](#) (5060E, 5070E, 5080E, 5060EN, 5080EN)
[RE253519](#) (5090E)



Replace after cleaning 3 or 5 times or annually whichever ever occurs first.



PRIMARY FUEL FILTER
[DZ11467](#) (5060E, 5070E, 5080E, 5060EN, 5080EN)



FINAL FUEL FILTER
[RE62418](#) (5060E, 5080EN)
[RE62419](#) (5090E)



FUEL TANK FILTER
[T257865](#) (5060E, 5070E, 5078E, 5080E, 5090E)

Replace after every 500 hours.



OIL FILTER
[RE507204](#) (for India) (5060E, 5070E, 5080E, 5060EN, 5080EN)
[T19044](#) (for Export)
[DZ114256](#) (004294 -)
[RE504836](#) (5090E)



Replace initially after 100 hours and every 375 hours, 500 hours and annually.

CAPACITIES

5E Series Tractors - 5060E, 5070E, 5078E (300101-), 5080E, 5090E (300101-), 5060EN, 5080EN (South America Edition)

CAPACITIES (Approximate):

Fuel Tank:

(5060E, 5070E, 5078E, 5080E, 5090E)	
OOS.....	115 L (30.38 gal)
CAB.....	125 L (33.02 gal)
(5060EN, 5080EN)	
.....	70 L (18.45 gal)

Cooling System:

Cool-Gard™ II

(5060E, 5070E, 5080E, 5090E, 5060EN, 5080EN)	
.....	11 L (2.9 gal)
(5078E, 50890E)	
.....	18 L (4.75 gal)

Transmission and Hydraulic System:

Hy-Gard™

(5060E, 5070E, 5078E, 5080E, 5090E)	
Top Shaft Synchronized(TSS).....	40 L (10.57 gal)
PowrReverser™.....	43.5 L (11.49 gal)
(5060EN, 5080EN)	
Partial Synchronous.....	40 L (10.57 gal)

Front Axle:

Hy-Gard™

 
(5060E, 5070E, 5078E, 5080E, 5090E)	
Total Capacity.....	5.6 L (1.48 gal)
Front Axle Differential Housing.....	4 L (1.06 gal)
Front Axle Final Drive Housing (each).....	0.8 L (0.211 gal)
(5060EN, 5080EN)	
Total Capacity.....	6 L (1.58 gal)
Front Axle Differential Housing.....	5 L (1.32 gal)
Front Axle Final Drive Housing (each).....	0.5 L (0.13 gal)



REPLACEMENT PARTS GUIDE

5E Series Tractors - 5060E, 5070E, 5078E (300101-), 5080E, 5090E (300101-), 5060EN, 5080EN (South America Edition)

ENGINE



CLUTCH DISK
[RE265964](#) (TRACTION)
[RE227648](#) (PTO)
[SJ10903](#)
 (Power Reverser™) (5060E, 5070E, 5078E (300101-), 5080E, 5090E (300101-))



BRAKE DISK
[SJ40143](#)
[RE45938](#) (MFWD)
 (5060E, 5070E 5080E, 5060EN, 5080EN)
[SJ17870](#) (HAND BRAKE)



BATTERY
[CQM20060](#)



FAN BELT DRIVE
[SU62748](#) (5060E, 5070E, 5060EN, 5080E, 5080EN)
[SU55005](#) (OOS)
[SU55006](#) (CAB)
[SU62747](#) (CAB) (LGTH = 1355 MM)
 (5080E, 5070E) (5080E, 5070E, 5060E)



ALTERNATOR
[SJ33934](#) (90 A) (5060E, 5070E, 5080E, 5060EN, 5080EN)
[AT417196](#) (90 A) (5078E (300101-), 5080E, 5090E (300101-))



CAB

SEAT
[SJ17647](#) (5060EN, 5080EN)

[SJ32558](#) (OOS) (5060E, 5070E, 5080E, 5078E (300101-), 5090E (300101-))

[DQ63806](#) (Sync Shuttle™) (5060E, 5070E, 5080E, 5078E (300101-), 5090E (300101-))

[LVA19859](#) (MECHANICAL SUSPENSION) (OOS) (5060E, 5070E, 5080E, 5078E (300101-), 5090E (300101-))

[SJ34185](#) (AIR SUSPENSION) (OOS)(5060E, 5070E, 5080E, 5078E (300101-), 5090E (300101-))

[SJ41112](#) (AIR SUSPENSION) (CAB)(5060E, 5070E, 5080E, 5078E (300101-), 5090E (300101-))

[SJ41111](#) (MECHANICAL SUSPENSION) (CAB) (5060E, 5070E, 5080E, 5078E (300101-), 5090E (300101-))

[DQ58190](#) (BOTTOM) (5060E, 5070E, 5080E)

[DQ58192](#) (BACK) (5060E, 5070E, 5080E)



REPLACEMENT PARTS GUIDE

5E Series Tractors - 5060E, 5070E, 5078E (300101-), 5080E, 5090E (300101-), 5060EN, 5080EN (South America Edition)

AXLE

TIE ROD

[R125541](#) (LH)(TIE ROD ASSEMBLY)
(2WD)(5060EN, 5080EN)

[RE61848](#) (LH)(TIE ROD END)(2WD)
(5060EN, 5080EN)

[R125544](#) (RH)(TIE ROD ASSEMBLY)
(2WD)(5060EN, 5080EN)

[RE61849](#) (RH)(TIE ROD END)(2WD)
(5060EN)

[RE217616](#) (TIE ROD ASSEMBLY)(2WD)
(5060E, 5070E, 5080E,

[RE217817](#) (TIE ROD END)(2WD)(5060E,
5070E, 5080E)

[RE217819](#) (BALL JOINT)(2WD)(5060E,
5070E, 5080E)

[RE61833](#) (LH)(TIE ROD END)(MFWD)
(5060EN, 5080EN)

[RE61835](#) (BALL JOINT)(MFWD)
(5060EN, 5080EN)

[RE61836](#) (RH)(TIE ROD END)(MFWD)
(5060EN, 5080EN)

[SJ28060](#) (RH)(MFWD)(5060E, 5070E, 5080E,
5078E (S.N. 300101-), 5090E (S.N. 300101-))

[SJ27160](#) (LH)(MFWD)(5060E, 5070E, 5080E,
5078E (S.N. 300101-), 5090E (S.N. 300101-))

[RE271441](#) (TIE ROD END)(MFWD)(5060E,
5070E, 5080E, 5078E (S.N. 300101-),
5090E (S.N. 300101-))

[SJ27163](#) (BALL JOINT)(MFWD)(5060E,
5070E, 5080E, 5078E (S.N. 300101-),
5090E (S.N. 300101-))

[RE204877](#) (TIE ROD ASSEMBLY)(MFWD)
(FOR CKD ARGENTINA)(5060E, 5070E,
5080E)

[RE204878](#) (90 DEGREE)(MFWD)(FOR
CKD ARGENTINA)(5060E, 5070E, 5080E)

[RE204879](#) (TIE ROD END)(MFWD)(FOR
CKD ARGENTINA)(5060E, 5070E, 5080E)

[RE271437](#) (TIE ROD ASSEMBLY)(MFWD,
DANA)(5090E (S.N. 300101-))

[RE271440](#) (TIE ROD END)(MFWD, DANA)
(5090E (S.N. 300101-))

[RE271441](#) (90 DEGREE)(MFWD, DANA)
(5090E (S.N. 300101-))



JOHN DEERE

Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.