

REPLACEMENT PARTS GUIDE

5E Series - 5076EF Tractor

CAB

RECIRCULATION AIR FILTER

[RE195491](#)

Clean after every 250 hours and annually. Change as required.

ACTIVATED CARBON AIR FILTER

[SJ14288](#)

Replace after every 250 hours.

FRESH AIR FILTER

[RE198488](#)

Clean after every 250 hours and annually. Change as required.

HYDRAULIC

FUEL FILTER

[RE45864](#)

Replace after first 100 hours then after every 500 hours.

TRANSMISSION

OIL FILTER

[SJ10672](#)

Replace after first 100 hours then after every 500 hours.



ENGINE

PRIMARY AIR FILTER

[KV16429](#)

SECONDARY AIR FILTER

[AT171854](#)

Replace after every 1000 hours or annually whichever occurs first. Change as required.

PRIMARY FUEL FILTER

[AL153517](#)

FINAL FUEL FILTER

[RE60021](#)

Replace after every 500 hours for Cab model or else for OOS model replace after every 250 hours.

OIL FILTER

[RE504836](#)

Change after first 100 hours then after every 250 hours. (If diesel fuel has a sulfur content greater than 0.7 percent, reduce service interval to half)

CAPACITIES

5E Series - 5076EF Tractor

CAPACITIES (Approximate):

Fuel Tank:

5076EF.....60 L (16 gal)

Cooling System:

Cool-Gard™ II

..... 10.8 L (2.37 gal)

Crankcase with Filter:

Plus-50™ II

.....8.5 L (1.86 gal)

Mechanical Front Wheel Drive (MFWD) Axle Housing:

Hy-Gard™

.....5.0 L (1.09 gal)

Mechanical Front Wheel Drive (MFWD) Hubs (Each):

Hy-Gard™

.....0.6 L (0.13 gal)

REPLACEMENT PARTS GUIDE

5E Series - 5076EF Tractor

ENGINE



BRAKE DISK
[SJ40143](#) (BRAKE)
[L77358](#) (ACTUATING DISK)
[R113948](#) (DRIVE DISK) (MFWD)
[RE45938](#) (BRAKE DISK) (MFWD)



CLUTCH DISK
[RE265964](#) (TRACTION) (7 PAD)
[RE265965](#) (PTO) (7 PAD)
[SJ32011](#) (PTO DISK) (7 PAD)
[RE177574](#) (TRACTION) (6 PAD)
[RE227648](#) (PTO) (6 PAD)



BATTERY
[TY25879](#) (DRY CHARGED BATTERY)



ALTERNATOR
[RE529377](#) (70 A)



FAN DRIVE BELT
[R216071](#) (LGTH = 1510 mm)



CAB



SEAT
[AP39777](#)

AXLE



TIE ROD
[RE61848](#) (LH) (2WD)
[RE61849](#) (RH) (2WD)

