



REPLACEMENT PARTS GUIDE

624K-II Loader (PIN: 1DW624K__D677549—)
 624K-II Loader (PIN: 1DW624K__C677549—)



CAB RECIRCULATING AIR FILTER
[AT307501](#)
 Interval (hrs) - As required.

CAB FRESH AIR FILTER
[AT191102](#)
 Interval (hrs) - As required.

HYDRAULIC SYSTEM RETURN FILTER
[AT335977](#)
 Interval (hrs) - 4000.

AXLE OIL FILTERS
[AH128449](#)
 Interval (hrs) - 1000

TRANSMISSION OIL FILTER²
[AT468647](#)
 Interval (hrs) - 2000.

PRIMARY FUEL FILTER
[RE541922](#)
 Interval (hrs) - 500.

FINAL FUEL FILTER
[RE522878](#)
 Interval (hrs) - 500.

ENGINE OIL FILTER
[RE504836](#)
 Interval (hrs) - 500.

HYDRAULIC RESERVOIR BREATHER FILTER
[AM39653](#)
 Interval (hrs) - 500.

ENGINE AIR CLEANER ELEMENT—PRIMARY FILTER
[AT300487](#)
 Interval (hrs) - 1000.

ENGINE AIR CLEANER ELEMENT—SECONDARY FILTER
[AT314583](#)
 Interval (hrs) - 1000.

AUXILIARY FUEL FILTER (IF EQUIPPED)
[AT365870](#)
 Interval (hrs) - 500.

IN-LINE FUEL STRAINER
[AT223493](#)
 Interval (hrs) - 500.

ENGINE ROCKER ARM COVER GASKET
[R524497](#)
 Interval (hrs) - 2000.

ENGINE AIR CLEANER DUST UNLOADER VALVE
[M89679](#)
 Interval (hrs) - 1000.

OILS AND PARTS INFORMATION

624K-II Loader (PIN: 1DW624K__D677549—)

624K-II Loader (PIN: 1DW624K__C677549—)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ³	19.5 L (5.1 gal)	500
John Deere Hy-Gard™ Front Axle Oil ³	22.0 L (5.8 gal)	2000
John Deere Hy-Gard™ Rear Axle Oil ³	17.0 L (4.5 gal)	2000
John Deere Hy-Gard™ Park Brake Oil ³	300.0 mL (10.0 fl oz)	1000
John Deere Hy-Gard™ Transmission Oil ^{2, 3}	22.0 L (5.8 gal)	2000
John Deere Hydrau™ Hydraulic System Oil	110.0 L (29.1 gal)	4000
John Deere Cool-Gard™ II Pre-Mix	27.4 L (7.2 gal)	6000

Fluid Analysis Kits⁴

Part Description	Part Number	Qty or Capacity	Change Interval In Hours
Diesel Engine Oil	AT346594	1	250
Transmission Oil	AT346594	1	500
Axle Oil	AT346594	2	500
Hydraulic Oil	AT346594	1	500
Diesel Fuel	AT180344	1	500
Engine Coolant	TY26873	1	500

²Reduce service intervals to 1500 hours in severe applications, which run the torque converter at high loads for more than approximately 25% of the time.

³See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

⁴Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.

Plus-50 is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

COOL-GARD is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

Service Intervals

As Required	
<input type="checkbox"/> Inspect tires and check pressure	<input type="checkbox"/> Drain water from auxiliary fuel filter with water separator (if equipped)
<input type="checkbox"/> Check wheel bolt torque	<input type="checkbox"/> Check window washer fluid level
<input type="checkbox"/> Inspect engine air cleaner elements	<input type="checkbox"/> Drain water from primary fuel filter with water separator
<input type="checkbox"/> Inspect air conditioner compressor and alternator belt	<input type="checkbox"/> Drain water from final fuel filter
<input type="checkbox"/> Clean cooler cores	<input type="checkbox"/> Check and clean or replace cab fresh air filter
<input type="checkbox"/> Check rear camera and radar object detection (ROD) system (if equipped)	<input type="checkbox"/> Check and clean or replace cab recirculating air filter
Every 10 Hours or Daily	
<input type="checkbox"/> Clean air cleaner dust unloader valve	<input type="checkbox"/> Check hydraulic system oil level
<input type="checkbox"/> Check coolant level at surge tank	<input type="checkbox"/> Check transmission oil level
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Inspect outer pin seals (if equipped)
Initial Service—100 Hours	
<input type="checkbox"/> Replace axle oil filters	
Every 100 Hours	
<input type="checkbox"/> Lubricate loader linkage and cylinder pivots	
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Lubricate driveline upper and lower sliding joints and lower U-joints	<input type="checkbox"/> Replace in-line fuel strainer
<input type="checkbox"/> Check front and rear axle oil level	<input type="checkbox"/> Replace auxiliary fuel filter (if equipped)
<input type="checkbox"/> Lubricate front and rear axle shaft seals	<input type="checkbox"/> Drain and refill engine oil and replace filter
<input type="checkbox"/> Check battery electrolyte level and terminals	<input type="checkbox"/> Replace primary fuel filter
<input type="checkbox"/> Check air intake hoses and charge air cooler tube couplings	<input type="checkbox"/> Replace final fuel filter
<input type="checkbox"/> Take axle oil sample	<input type="checkbox"/> Replace hydraulic reservoir breather filter
<input type="checkbox"/> Take transmission oil sample	<input type="checkbox"/> Check park brake oil level
<input type="checkbox"/> Take hydraulic oil sample	<input type="checkbox"/> Lubricate front and rear shaft seals on park brake
<input type="checkbox"/> Take diesel fuel sample	<input type="checkbox"/> Check ride control accumulator (if equipped)
<input type="checkbox"/> Take engine coolant sample	
Every 1000 Hours	
<input type="checkbox"/> Replace air cleaner dust unloader valve	<input type="checkbox"/> Clean engine crankcase vent tube
<input type="checkbox"/> Replace engine air cleaner elements	<input type="checkbox"/> Lubricate frame hinge pivots
<input type="checkbox"/> Replace axle oil filters	<input type="checkbox"/> Drain and refill park brake oil
<input type="checkbox"/> Check coolant condition	
Every 2000 Hours	
<input type="checkbox"/> Drain and refill transmission oil and replace filter ²	<input type="checkbox"/> Rerun transmission clutch calibration (cab monitor)
<input type="checkbox"/> Drain and refill front and rear axle oil	<input type="checkbox"/> Replace outer pin seals (if equipped)
<input type="checkbox"/> Check and adjust engine valve lash	
Every 4000 Hours	
<input type="checkbox"/> Clean hydraulic pump case drain in-line screen	<input type="checkbox"/> Drain, flush, and refill hydraulic system oil
<input type="checkbox"/> Replace crankshaft damper	<input type="checkbox"/> Clean hydraulic system fill strainer
<input type="checkbox"/> Replace hydraulic system return filter	
Every 5000 Hours	
<input type="checkbox"/> Check driveline damper for cracks	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	