 







# REPLACEMENT PARTS GUIDE


## 803MH Harvester (PIN: 1T0803MH\_\_408746— )


 **Primary Engine Air Filter Element**  
[AH148880](#)  
Interval (hrs) - As Required.

 **SECONDARY ENGINE AIR FILTER ELEMENT**  
[RE63932](#)  
Interval (hrs) - As Required.


 **DIESEL PARTICULATE FILTER (DPF) (COMPONENT OF EXHAUST FILTER)**  
[RE563901](#)  
Interval (hrs) - As Required.


 **DIESEL EXHAUST FLUID (DEF) IN-LINE FILTER (IF EQUIPPED)**  
[DZ118548](#)  
Interval (hrs) - 6000.


 **FUEL CAP BREATHER ELEMENT**  
[T231314](#)  
Interval (hrs) - 2000.

 
 **HYDRAULIC OIL RETURN FILTER**  
[F061786](#)  
Interval (hrs) - 2000.

 


 **DIESEL EXHAUST FLUID (DEF) TANK BREATHER**  
[H216169](#)  
Interval (hrs) - 4000.

 **Final Fuel Filter Element**  
[DZ112918](#)  
Interval (hrs) - 500.

 **PRIMARY FUEL FILTER ELEMENT**  
[RE539465](#)  
Interval (hrs) - 500.

 **CAB FRESH AIR FILTER**  
[AT191102](#)  
Interval (hrs) - 1000.


 **CAB RECIRCULATION FILTER**  
[AT307501](#)  
Interval (hrs) - 1000.






# REPLACEMENT PARTS GUIDE


## 803MH Harvester (PIN: 1T0803MH\_\_408746—)




**DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER**  
[DZ114640](#)  
Interval (hrs) - 2000.




**ENGINE OIL FILTER ELEMENT**  
[DZ101884](#)  
Interval (hrs) - 500.




**HYDROSTATIC PUMP CASE OIL FILTER (IF EQUIPPED)**  
[AT318160](#)  
Interval (hrs) - 2000.




**Hydraulic Oil Breather Filter**  
[F122930](#)  
Interval (hrs) - 2000.




**ENGINE ROCKER ARM COVER GASKET**  
[R526607](#)  
Interval (hrs) - 2000.



**HYDROSTATIC CHARGE OIL FILTER (IF EQUIPPED)**  
[AT412116](#)  
Interval (hrs) - 2000.













**FUEL PREFILTER ELEMENT (IF EQUIPPED)**  
[R502778](#)  
Interval (hrs) - 500.



**AUXILIARY FUEL FILTER ELEMENT (IF EQUIPPED)**  
[AT365869](#)  
Interval (hrs) - 500.

# OIL & CAPACITIES INFORMATION

## 803MH Harvester (PIN: 1T0803MH\_\_408746— )

Part Description	Part Number	Qty or capacity	Change Interval In Hours
Idler Oil <sup>4</sup> 	<a href="#"><u>TY26372</u></a>	As Required	100 Hours
John Deere Plus-50™ II Engine Oil <sup>4</sup> 	<a href="#"><u>TY26669</u></a>	31.0 L (8.2 gal)	500 Hours
U6 Track Drive Planetary Oil <sup>4</sup> (each) 	<a href="#"><u>TY26372</u></a>	8.0 L (2.1 gal)	1000 Hours
U7 Track Drive Planetary Oil <sup>4</sup> (each) 	<a href="#"><u>TY26372</u></a>	9.0 L(2.4 gal)	1000 Hours
U7L Track Drive Planetary Oil <sup>4</sup> (each) 	<a href="#"><u>TY26372</u></a>	10.0 L(2.6 gal)	1000 Hours
API GL-5 Swing Drive Gear Case Oil <sup>4</sup> (each) 	<a href="#"><u>TY26372</u></a>	4.5 L(1.2 gal)	1000 Hours
Hy-Gard™ Pump Drive GearCase Oil <sup>4</sup> (if equipped) 	<a href="#"><u>TY6354</u></a>	6.6 L(1.7 gal)	1000 Hours
John Deere Hydrau™ Hydraulic Enclosure Door Pump Oil <sup>4</sup> 	<a href="#"><u>TY27318</u></a>	4.1 L(1.1 gal)	2000 Hours
John Deere Hydrau™ Hydraulic Oil <sup>4</sup> 	<a href="#"><u>TY27367</u></a>	152.0 L(40.2 gal)	2000 Hours
Cool-Gard™ II Pre-Mix 	<a href="#"><u>TY26575</u></a>	46.0 L (12.5 gal)	6000 Hours

# OIL & CAPACITIES INFORMATION

## 803MH Harvester (PIN: 1T0803MH\_ \_ \_408746— )

Part Description	Part Number	Qty or capacity	Change Interval In Hours
<b>Fluid Analysis Test Kits<sup>4</sup></b>			
Engine Oil	<a href="#">AT346594</a>	1	250
Hydraulic Oil	<a href="#">AT346594</a>	1	500
Diesel Fuel	<a href="#">TY27329</a>	1	500
Pump Drive Gear Case Oil (if equipped)	<a href="#">AT346594</a>	1	500
Track Drive Planetary Oil	<a href="#">AT346594</a>	2	500
Swing Drive Gear Case Oil <sup>5</sup>	<a href="#">AT346594</a>	2	500
Enclosure Door Pump Oil	<a href="#">AT346594</a>	1	500
Engine Coolant	<a href="#">TY27787</a>	1	500
<p><sup>3</sup> See operator's manual for recommended oil type and oil viscosities based on operating temperatures.</p> <p><sup>4</sup> Based on fluid analysis results, intervals may need to be adjusted for your operating conditions. Consult your local John Deere dealer.</p> <p><sup>5</sup> Machines not equipped with high torque swing option only require one fluid analysis kit.</p>			

*Plus-50 is a trademark of Deere & Company*  
*Hydrau is a trademark of Deere & Company*  
*Hy-Gard is a trademark of Deere & Company*  
*Cool-Gard is a trademark of Deere & Company*

## Service Intervals

As Required	
<input type="checkbox"/> Inspect serpentine belt	<input type="checkbox"/> Lubricate door hinges
<input type="checkbox"/> Replace engine air filter elements	<input type="checkbox"/> Lubricate toolbox door hinges (if equipped)
<input type="checkbox"/> Check and clean cooling system and condenser fins	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Clean and tighten battery terminals	
Every 10 Hours or Daily	
<input type="checkbox"/> Lubricate leveler pivot joints and cylinders (if equipped)	<input type="checkbox"/> Check and drain auxiliary fuel filter and water separator (if equipped)
<input type="checkbox"/> Check fire suppression system (if equipped)	<input type="checkbox"/> Check engine coolant level
<input type="checkbox"/> Check swing drive gear case oil level	<input type="checkbox"/> Check and adjust track sag
<input type="checkbox"/> Check hydraulic oil level	<input type="checkbox"/> Lubricate boom joints and cylinder ends
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Lubricate swing drive pinion and bearing
<input type="checkbox"/> Check pump drive gear case oil level (if equipped)	<input type="checkbox"/> Lubricate crank and link (if equipped)
<input type="checkbox"/> Check and drain primary fuel filter and water separator	<input type="checkbox"/> Inspect fire extinguisher
<input type="checkbox"/> Inspect harvesting head chain shot guard (if equipped)	
Initial Service—100 Hours <sup>1</sup>	
<input type="checkbox"/> Check track shoe cap screw torque	
Every 100 Hours	
<input type="checkbox"/> Lubricate swing drive gear case bearing	<input type="checkbox"/> Check idler oil level
Initial Service—250 Hours <sup>2</sup>	
<input type="checkbox"/> Drain and refill swing drive gear case oil	<input type="checkbox"/> Drain and refill pump drive gear case oil (if equipped)
<input type="checkbox"/> Drain and refill track drive planetary oil	<input type="checkbox"/> Check lower roller mounting cap screw torque
Every 250 Hours	
<input type="checkbox"/> Check rear window alternative exit latches and retainer knobs	<input type="checkbox"/> Check track drive planetary oil level
<input type="checkbox"/> Check skylight latch tension	<input type="checkbox"/> Check track shoe cap screw torque
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Replace fuel prefilter (if equipped)	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take pump drive gear case oil sample (if equipped)
<input type="checkbox"/> Replace auxiliary fuel filter and water separator (if equipped)	<input type="checkbox"/> Take track drive planetary oil sample
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take swing drive gear case oil sample
<input type="checkbox"/> Check battery terminals and electrolyte level (if applicable)	<input type="checkbox"/> Check enclosure door pump oil level
<input type="checkbox"/> Check air intake hoses	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Drain water and sediment from fuel tank	<input type="checkbox"/> Take enclosure door pump oil sample
Every 1000 Hours	
<input type="checkbox"/> Drain and refill swing drive gear case oil	<input type="checkbox"/> Drain and refill track drive planetary oil
<input type="checkbox"/> Check coolant condition	<input type="checkbox"/> Drain and refill pump drive gear case oil (if equipped)
<input type="checkbox"/> Check cab fresh air and cab recirculation air filters	

## Service Intervals

Every 2000 Hours	
<input type="checkbox"/> Drain and refill hydraulic oil	<input type="checkbox"/> Drain and refill enclosure door pump oil
<input type="checkbox"/> Replace hydraulic oil return filters	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) dosing unit filter <sup>3</sup>
<input type="checkbox"/> Replace hydraulic oil breather filter	<input type="checkbox"/> Check and adjust engine valve lash
<input type="checkbox"/> Replace hydrostatic charge oil filter (if equipped)	<input type="checkbox"/> Check open crankcase vent (OCV)
<input type="checkbox"/> Replace hydrostatic pump case oil filter (if equipped)	<input type="checkbox"/> Replace fuel cap breather element
Every 4000 Hours	
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) tank breather filter	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill engine coolant	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) in-line filter <sup>3</sup>