

# REPLACEMENT PARTS GUIDE

824P (PIN: 1DW824PA\_\_L\_XXXXX-) 824P (PIN: 1DW824PA\_\_D\_XXXXX-)



**CAB FRESH AIR FILTER**  
[AT191102](#)  
Interval (hrs) - As Required.

**CAB RECIRCULATION AIR FILTER**  
[AT307501](#)  
Interval (hrs) - As Required.

**AXLE OIL FILTER**  
[AH128449](#)  
Interval (hrs) - 1000.

**OUTER PIN SEALS**  
[AT341092](#)  
Interval (hrs) - As Required.

**SERPENTINE BELT**  
[T437056](#)  
Interval (hrs) - As Required.

**AIR CLEANER DUST UNLOADER VALVE**  
[T158495](#)  
Interval (hrs) - As Required.

**DEF DOSING UNIT FILTER - (IF EQUIPPED)**  
[DZ114640](#)  
Interval (hrs) - 2000.

**FAST FILL FUEL BREATHER (IF EQUIPPED)**  
[T225008](#)  
Interval (hrs) - 500.

**HYDRAULIC RESERVOIR BREATHER**  
[AM39653](#)  
Interval (hrs) - 500.

**PRIMARY AIR CLEANER ELEMENTS**  
[AT223226](#)  
Interval (hrs) - 1000.

**SECONDARY AIR CLEANER ELEMENTS**  
[AT175224](#)  
Interval (hrs) - 1000.

**FUEL TANK BREATHER**  
[H216169](#)  
Interval (hrs) - 1000.

**DEF IN-LINE FILTER (IF EQUIPPED)**  
[DZ124403](#)  
Interval (hrs) - 2000.

**DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER)**  
[DZ100174](#)  
Interval (hrs) - As Required.

# REPLACEMENT PARTS GUIDE

824P (PIN: 1DW824PA\_\_L\_XXXXX-) 824P (PIN: 1DW824PA\_\_D\_XXXXX-)



## ENGINE ROCKER ARM COVER GASKET - FRONT (TOP AND BOTTOM)

[R526607](#)

Interval (hrs) - 2000.



## ENGINE ROCKER ARM COVER GASKET - REAR

[R532724](#)

Interval (hrs) - 2000.



## AUTO-LUBE INTERNAL PUMP FILTER (IF EQUIPPED)

[T420232](#)

Interval (hrs) - As Required.



## DRIVELINE DAMPER

[AT426103](#)

Interval (hrs) - As Required.



## ENGINE OIL FILTER

[DZ118283](#)

Interval (hrs) - 500.



## PRIMARY FUEL FILTER

[RE539465](#)

Interval (hrs) - 500.



## FINAL FUEL FILTER

[DZ112918](#)

Interval (hrs) - 500.



## TRANSMISSION OIL FILTER

[AT468647](#)

Interval (hrs) - 2000.



## HYDRAULIC SYSTEM RETURN FILTER

[AT335977](#)

Interval (hrs) - 4000.



## AUXILIARY FUEL FILTER (IF EQUIPPED)

[AT387534](#)

Interval (hrs) - 500.

# REPLACEMENT PARTS GUIDE

824P (PIN: 1DW824PA\_\_L\_XXXXX-) 824P (PIN: 1DW824PA\_\_D\_XXXXX-)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil <sup>2</sup>	34.0 L (9.0 gal)	500
<b>John Deere Hy-Gard™ Oil</b>		
Front and Rear Axle Oil <sup>2</sup>	55.3 L (14.6 gal)	2000
Park Brake Oil <sup>2</sup>	0.7 L (24 oz)	1000
Transmission Oil <sup>2</sup>	28.0 L (7.4 gal)	2000
John Deere Hydrau™ Hydraulic System Oil <sup>2</sup>	142.0 L (37.5 gal)	4000
John Deere Cool-Gard™ II Pre-Mix	48.0 L (12.7 gal)	6000
<b>Fluid Analysis Test Kits<sup>3</sup></b>		
Engine Oil	<a href="#">AT346594</a>	1 250
Transmission Oil	<a href="#">AT346594</a>	1 500
Axle Oil	<a href="#">AT346594</a>	2 500
Park Brake	<a href="#">AT346594</a>	1 500
Hydraulic Oil	<a href="#">AT346594</a>	1 500
Diesel Fuel	<a href="#">TY27329</a>	1 500
Engine Coolant	<a href="#">TY27787</a>	1 500
<p><sup>2</sup>See operator's manual for recommended oil type and oil viscosities based on operating temperatures.</p> <p><sup>3</sup>Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.</p>		

Plus-50 is a trademark of Deere & Company  
 Hydrau is a trademark of Deere & Company  
 Hy-Gard is a trademark of Deere & Company  
 Cool-Gard is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

\*See operator's manual for additional details.

## Service Intervals

As Required	
<input type="checkbox"/> Inspect tires and check pressure	<input type="checkbox"/> Clean cooler cores
<input type="checkbox"/> Check wheel bolt/nut torque	<input type="checkbox"/> Check windshield washer fluid level
<input type="checkbox"/> Inspect engine air cleaner elements	<input type="checkbox"/> Drain water from primary fuel filter with water separator
<input type="checkbox"/> Inspect serpentine belt	<input type="checkbox"/> Drain water from auxiliary fuel filter with water separator
<input type="checkbox"/> Replace fast fill fuel breather (if equipped)	<input type="checkbox"/> Check and clean or replace cab fresh air filter
<input type="checkbox"/> Check and clean fuel sending unit pick-up screen	<input type="checkbox"/> Check and clean or replace cab recirculating air filter
<input type="checkbox"/> Refill auto-lube grease reservoir (if equipped)	<input type="checkbox"/> Check and clean air cleaner dust unloader valve
<input type="checkbox"/> Clean hydraulic pump case drain in-line screens	<input type="checkbox"/> Drain, flush, and refill fuel tank
<input type="checkbox"/> Check rear camera and radar object detection (ROD) system (if equipped)	<input type="checkbox"/> Clean and tighten battery terminals
Every 10 Hours or Daily	
<input type="checkbox"/> Inspect outer pin seals	<input type="checkbox"/> Check hydraulic system oil level
<input type="checkbox"/> Check coolant level at surge tank	<input type="checkbox"/> Check transmission oil level
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Inspect auto-lube grease lines for damage and leakage (if equipped)
<input type="checkbox"/> Clean air cleaner dust unloader valve, replace if damaged	<input type="checkbox"/> Inspect auto-lube grease reservoir and manifolds for damage and leakage (if equipped)
Initial Service—100 Hours	
<input type="checkbox"/> Replace axle oil filters	<input type="checkbox"/> Drain and refill front and rear axle oil
Every 100 Hours	
<input type="checkbox"/> Lubricate loader linkage and cylinder pivots (less auto-lube)	
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Lubricate front and rear shaft seals on park brake	<input type="checkbox"/> Check front and rear axle oil level
<input type="checkbox"/> Lubricate driveline upper and lower sliding joints and lower U-joints	<input type="checkbox"/> Check air intake hoses and charge air cooler tube couplings
<input type="checkbox"/> Lubricate front and rear axle shaft seals	<input type="checkbox"/> Check park brake oil level
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Check hybrid battery electrolyte level (if equipped)
<input type="checkbox"/> Replace fast fill fuel breather filter (if equipped)	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Replace primary fuel filter with water separator	<input type="checkbox"/> Take park brake oil sample
<input type="checkbox"/> Replace auxiliary fuel filter with water separator (if equipped)	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace hydraulic reservoir breather filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Inspect auto-lube internal pump filter (if equipped)	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Check ride control accumulator	
Every 1000 Hours	
<input type="checkbox"/> Replace engine air cleaner elements	<input type="checkbox"/> Replace fuel tank breather filter

## Service Intervals

Every 2000 Hours	
<input type="checkbox"/> Check and adjust engine valve lash	<input type="checkbox"/> Drain and refill transmission oil and replace filters
<input type="checkbox"/> Rerun transmission clutch calibration (cab monitor)	<input type="checkbox"/> Drain and refill front and rear axle oil
Every 4000 Hours	
<input type="checkbox"/> Clean hydraulic system fill strainer	<input type="checkbox"/> Drain, flush, and refill hydraulic system oil
<input type="checkbox"/> Replace hydraulic system return filters	
Every 5000 Hours	
<input type="checkbox"/> Check driveline damper for cracks	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	