

REPLACEMENT PARTS GUIDE

672G and 672GP Motor Grader (PIN: 1DW672GX__F678818 - F680877)



FOR 6068DW201 AND 6068DW301 ENGINES

SECONDARY FILTER ELEMENT
[AT178517](#)
 Interval (hrs) - As Required .

ENGINE ROCKER ARM COVER GASKET
[R524497](#)
 Interval (hrs) - 2000.

CRANKSHAFT DAMPER
[RE508578](#)
 Interval (hrs) - 4500.

PRIMARY AIR FILTER ELEMENT
[AT178516](#)
 Interval (hrs) - As Required .

FINAL FUEL FILTER ELEMENT
[RE522878](#)
 Interval (hrs) - 500 .

PRIMARY FUEL FILTER ELEMENT
[RE541922](#)
 Interval (hrs) - 500 .

ENGINE OIL FILTER
[RE504836](#)
 Interval (hrs) - 500 .



FOR 6090HDW37 AND 6090HDW38 ENGINES

ENGINE OIL FILTER
[DZ118283](#)
 Interval (hrs) - 500 .

PRIMARY FUEL FILTER ELEMENT
[RE539465](#)
 Interval (hrs) - 500 .

FINAL FUEL FILTER ELEMENT
[DZ112918](#)
 Interval (hrs) - 500 .

PRIMARY AIR FILTER ELEMENT
[AT175223](#)
 Interval (hrs) - As Required .

SECONDARY AIR FILTER ELEMENT
[AT175224](#)
 Interval (hrs) - As Required .

ENGINE ROCKER ARM COVER GASKET
[R527884](#)
 Interval (hrs) - 2000 .

CRANKSHAFT DAMPER
[RE57604](#)
 Interval (hrs) - 4500 .

REPLACEMENT PARTS GUIDE

672G and 672GP Motor Grader (PIN: 1DW672GX_ _F678818 - F680877)



DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTERS

[DZ114640](#)

Interval (hrs) - 4000.



HYDRAULIC TANK BREATHER

[AT101565](#)

Interval (hrs) - 2000.



IN-LINE FUEL STRAINER

[AT423052](#)

Interval (hrs) - As Required .



FUEL TANK BREATHER

[H216169](#)

Interval (hrs) - 1000.



HYDRAULIC OIL FILTER

[AT367840](#)

Interval (hrs) - 2000.



TRANSMISSION OIL FILTER

[AT335492](#)

Interval (hrs) - 2000.



FAST FILL FUEL BREATHER—IF EQUIPPED

[T225008](#)


Interval (hrs) -1000.



CAB FRESH AIR FILTER

[AT191102](#)

 Interval (hrs) - As Required .



CAB RECIRCULATION AIR FILTER

[AT307501](#)

Interval (hrs) - As Required .



REAR AXLE BREATHER

[AT101565](#)

Interval (hrs) - 2000.



AUXILIARY FUEL FILTER ELEMENT—IF EQUIPPED

[AT365869](#)

Interval (hrs) - 500.










AXLE OIL FILTER

[AT335492](#)

Interval (hrs) - 2000.

PARTS AND CAPACITIES INFORMATION

672G and 672GP Motor Grader (PIN: 1DW672GX__F678818 - F680877)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ²			
6068DW201 and 6068DW301 Engines 	<u>TY26674</u>	26.0 L (6.9 gal)	500
6090HDW37 and 6090HDW38 Engines 	<u>TY26674</u>	27.0 L (7.1 gal)	500
Hydrau™ Hydraulic System Oil ² 	<u>TY27316</u>	53.0 L (14.0 gal)	4000
Hy-Gard™ 6WD Hub Oil—If Equipped (each) ² 	<u>TY6354</u>	7.2 L (2.0 gal)	1000
John Deere Hy-Gard™ Transmission, Axle, Circle Gear Case, and Tandem Oil ² 	<u>TY6354</u>	72.1 L (19.0 gal)	2000
John Deere Cool-Gard™ II Pre-Mix			
6068DW201 and 6068DW301 Engines 	<u>TY26575</u>	44.0 L (11.6 gal)	6000
6090HDW37 and 6090HDW38 Engines 	<u>TY26575</u>	48.5 L (12.8 gal)	6000

PARTS AND CAPACITIES INFORMATION

672G and 672GP Motor Grader (PIN: 1DW672GX__F678818 - F680877)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
Fluid Analysis Test Kits³			
Diesel Engine Oil	<u>AT346594</u>	1	250
Transmission Oil	<u>AT346594</u>	1	500
Axle Oil	<u>AT346594</u>	1	500
Tandem Oil	<u>AT346594</u>	2	500
Hydraulic Oil	<u>AT346594</u>	1	500
6WD Hub Oil (if equipped)	<u>AT346594</u>	2	500
Diesel Fuel	<u>TY27329</u>	1	500
Engine Coolant	<u>TY27787</u>	1	500
<p>²See operator's manual for recommended oil type and oil viscosities based on operating temperatures.</p> <p>³Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult and authorized John Deere dealer.</p>			

Plus-50 is a trademark of Deere & Company
 Hydrau is a trademark of Deere & Company
 Hy-Gard is a trademark of Deere & Company
 Cool-Gard is a trademark of Deere & Company



Service Intervals

As Required	
<input type="checkbox"/> Clean cooler cores	<input type="checkbox"/> Drain fuel tank sump
<input type="checkbox"/> Clean and tighten battery terminals	<input type="checkbox"/> Drain primary fuel filter and water separator
<input type="checkbox"/> Clean or replace cab fresh air and cab recirculation filters	<input type="checkbox"/> Drain auxiliary fuel filter and water separator—if equipped
<input type="checkbox"/> Lubricate circle pinion	<input type="checkbox"/> Replace in-line fuel strainer
<input type="checkbox"/> Check tire pressure	<input type="checkbox"/> Check rear camera—if equipped
<input type="checkbox"/> Check blade circle and draft frame wear inserts	<input type="checkbox"/> Transmission control unit (TCU) calibration
<input type="checkbox"/> Check blade lift cylinder sockets	<input type="checkbox"/> 6WD controller calibration—if equipped
<input type="checkbox"/> Lubricate saddle locking pin holes	<input type="checkbox"/> Cross slope sensors calibration—if equipped
<input type="checkbox"/> Blade side shift wear insert adjustment	<input type="checkbox"/> Hydraulic valves calibration—if equipped
<input type="checkbox"/> Inspect accessory belt and belt tensioner spring	<input type="checkbox"/> Replace starting fluid cylinder—if equipped
<input type="checkbox"/> Replace engine air intake filter elements	
Every 10 Hours or Daily	
<input type="checkbox"/> Check hydraulic tank oil level	<input type="checkbox"/> Check engine oil level
<input type="checkbox"/> Check transmission oil level	<input type="checkbox"/> Check engine coolant surge tank level
Every 50 Hours	
<input type="checkbox"/> Lubricate frame hinge pivots	<input type="checkbox"/> Lubricate front axle lean bar pivot
<input type="checkbox"/> Lubricate lift cylinders	<input type="checkbox"/> Lubricate front axle steering pin
<input type="checkbox"/> Lubricate draft frame ball	<input type="checkbox"/> Lubricate tie rod ends
<input type="checkbox"/> Lubricate front mounted scarifier or dozer blade—if equipped	<input type="checkbox"/> Lubricate steering cylinders
<input type="checkbox"/> Lubricate Balderson™ style front lift group—if equipped	<input type="checkbox"/> Lubricate midmount scarifier—if equipped
<input type="checkbox"/> Lubricate front axle oscillation pin	<input type="checkbox"/> Lubricate circle side shift cylinder
<input type="checkbox"/> Lubricate front axle lean pivot casting pins	<input type="checkbox"/> Lubricate saddle locking pin
Initial Service—250 Hours ¹	
<input type="checkbox"/> Drain and refill engine break-in oil and replace filter	<input type="checkbox"/> Replace axle oil filter
<input type="checkbox"/> Drain and refill engine break-in oil (quick service)—if equipped	<input type="checkbox"/> Replace transmission oil filter
Every 250 Hours	
<input type="checkbox"/> Check battery electrolyte level	<input type="checkbox"/> Take engine oil sample
Every 500 Hours	
<input type="checkbox"/> Check tandem oil level	<input type="checkbox"/> Replace primary fuel filter and water separator
<input type="checkbox"/> Check axle oil level	<input type="checkbox"/> Replace auxiliary fuel filter and water separator—if equipped
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Drain and refill engine oil (quick service)—if equipped	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Check receiver-dryer moisture indicator—if equipped	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Lubricate tandem pivots	<input type="checkbox"/> Take tandem oil sample

Service Intervals

<input type="checkbox"/> Check circle gear case oil level	<input type="checkbox"/> Take 6WD hub oil sample—if equipped
<input type="checkbox"/> Check brake accumulator	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Check 6WD hub oil level—if equipped	
Every 1000 Hours	
<input type="checkbox"/> Drain and refill 6WD hub oil—if equipped	<input type="checkbox"/> Check engine air intake hoses
<input type="checkbox"/> Adjust front wheel bearings—standard axle only	<input type="checkbox"/> Check coolant
<input type="checkbox"/> Replace fast fill fuel breather filter—if equipped	<input type="checkbox"/> Replace fuel tank breather
Every 2000 Hours	
<input type="checkbox"/> Drain and refill axle oil	<input type="checkbox"/> Clean engine crankcase ventilation tube
<input type="checkbox"/> Drain and refill transmission oil and clean transmission pump inlet screen	<input type="checkbox"/> Replace axle oil filter
<input type="checkbox"/> Drain and refill transmission oil (quick service)—if equipped	<input type="checkbox"/> Replace hydraulic oil filter
<input type="checkbox"/> Replace rear axle breather filter and hydraulic tank breather filter	<input type="checkbox"/> Replace transmission oil filter
<input type="checkbox"/> Drain and refill circle gear case oil	<input type="checkbox"/> Check and adjust engine valve lash (clearance)
Every 4000 Hours	
<input type="checkbox"/> Drain and refill hydraulic tank oil	<input type="checkbox"/> Drain and refill tandem oil
<input type="checkbox"/> Drain and refill hydraulic tank oil (quick service)—if equipped	
Every 4500 Hours	
<input type="checkbox"/> Replace engine crankshaft damper	
Every 6000 Hours	
<input type="checkbox"/> Drain, flush, and refill engine cooling system	<input type="checkbox"/> Drain, flush, and refill engine cooling system (quick service)—if equipped