

REPLACEMENT PARTS GUIDE

824K 4WD Loader (PIN: 1DW824K___D642008—) (PIN: 1DW824K___C642008—)



HYDRAULIC RESERVOIR BREATHER FILTER - [AM39653](#)

Interval (hrs) - 500.



HYDRAULIC SYSTEM RETURN FILTERS [AT335977](#)

Interval (hrs) - 4000.



CAB FRESH AIR FILTER [AT191102](#)

Interval (hrs) - As Required.



CAB RECIRCULATION FILTER [AT307501](#)

Interval (hrs) - As Required.



AXLE OIL FILTERS [AT333901](#)

Interval (hrs) - 1000.



BOOM TO ATTACHMENT JOINT [AT341092](#)

Interval (hrs) - As Required.



ATTACHMENT TO BUCKET LINK JOINT (S.N. —642080) - [AT330664](#)

Interval (hrs) - As Required.



ATTACHMENT TO BUCKET LINK JOINT, (S.N. 642081 -) - [AT410593](#)

Interval (hrs) - As Required.



BELLCRANK TO BOOM JOINT (S.N. 642081 -) - [AT410592](#)

Interval (hrs) - As Required.




CRANKSHAFT DAMPER [RE530733](#)

Interval (hrs) - As Required.



STEERING CYLINDER JOINT [T276674](#)

Interval (hrs) - As Required.

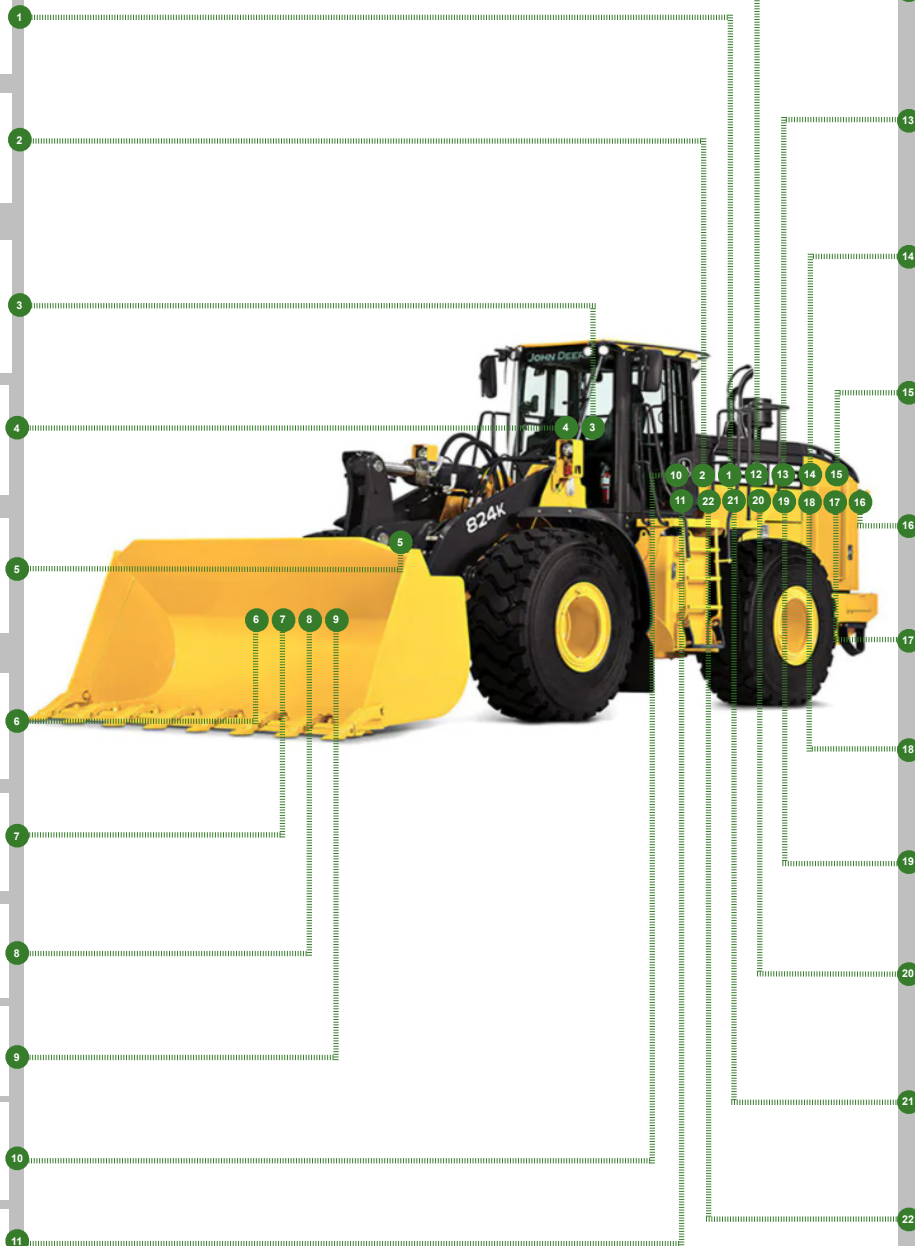

ENGINE OIL FILTER

[RE530107](#)

Interval (hrs) - 500.



ENGINE AIR CLEANER COMPONENTS PRIMARY - [AT311066](#)

Interval (hrs) - 1000.



ENGINE AIR CLEANER COMPONENTS SECONDARY - [AT311067](#)

Interval (hrs) - 1000.



ENGINE ROCKER ARM COVER GASKET [R521520](#)

Interval (hrs) - 2000.



PRIMARY FUEL FILTER

[RE532952](#)

Interval (hrs) - 500.



FINAL FUEL FILTER

[RE533910](#)

Interval (hrs) - 500.



AUXILIARY FUEL FILTER—IF EQUIPPED [AT365869](#)

Interval (hrs) - 500.



ENGINE AIR CLEANER DUST UNLOADER VALVE - [T208633](#)

Interval (hrs) - 1000.



IN-LINE FUEL STRAINER

[AT223493](#)

Interval (hrs) - 500.



FAST FILL FUEL BREATHER FILTER—IF EQUIPPED - [T225008](#)

Interval (hrs) - 500.



TRANSMISSION OIL FILTERS

[AT336140](#)

Interval (hrs) - 2000.



JOHN DEERE








Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

PARTS AND CAPACITIES INFORMATION

824K 4WD Loader (PIN: 1DW824K__D642008—) (PIN: 1DW824K__C642008—)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ⁵ 	TY26674	36.0 L (9.5 gal)	500
John Deere Hy-Gard™ Oil			
Transmission ⁵ 	TY6354	28.0 L(7.4 gal)	2000
Park Brake ⁵ 	TY6354	0.71 L(24.0 oz)	1000
Front and Rear Axle ⁵ 	TY6354	46.0 L(12.2 gal)	2000
John Deere Hydrau™ Hydraulic Oil ⁵ 	TY27367	159.0 L (42.9 gal)	4000
Cool-Gard™ II Pre-Mix 	TY26575	47.4 L (12.5 gal)	6000
Coolant Extender 	TY26603	As Required	As Required
Fluid Analysis Kits⁶			
Diesel Engine Oil	AT346594	1	250
Transmission Oil	AT346594	1	500
Axle Oil	AT346594	2	500
Hydraulic Oil	AT346594	1	500
Diesel Fuel	AT180344	1	500
Engine Coolant	TY26873	1	500
COOL-GARD™ II Test Strips	TY26605	1	As Required
⁵ See operator's manual for recommended oil type and oil viscosities based on operating temperatures. ⁶ Based on fluid analysis results, intervals may need to be adjusted for operating conditions. See an authorized John Deere dealer.			

824K 4WD Loader (PIN: 1DW824K__D642008—) (PIN: 1DW824K__C642008—)

As Required	
• Inspect tires and check pressure	• Drain water from primary fuel filter
• Check wheel bolt/nut torque	• Replace fast fill fuel breather filter—if equipped ¹
• Inspect engine air cleaner elements	• Check and clean or replace cab fresh air filter
• Inspect air conditioner compressor and alternator belt	• Check and clean or replace cab recirculating air filter
• Clean cooler cores	• Add coolant extender as indicated by COOL-GARD™ II test strips
• Check windshield washer fluid level	• Drain water from auxiliary fuel filter and water separator—if equipped
• Check rear camera and radar object detection (ROD) system—if equipped	
10 Hours or Daily	
• Check coolant level in surge tank	• Check hydraulic system oil level
• Check engine oil level	• Check transmission oil level
• Inspect outer pin seals	• Clean air cleaner dust unloader valve
Every 100 Hours	
• Lubricate loader linkage and cylinder pivots (unless NeverGrease™ equipped)	
Initial Service—250 Hours²	
• Drain and refill engine oil and replace filter	• Drain and refill front and rear axle oil
• Replace axle oil filters	
Every 250 Hours	
• Take engine oil sample	
Every 500 Hours	
• Replace final fuel filter	• Check park brake oil level
• Replace primary fuel filter	• Lubricate front and rear shaft seals on park brake
• Replace in-line fuel strainer	• Check front and rear axle oil level
• Drain and refill engine oil and replace filter	• Take axle oil sample
• Check battery water level and terminals	• Take transmission oil sample
• Check air intake hoses and charge air cooler tube couplings	• Take engine coolant sample
• Replace fast fill fuel breather filter—if equipped ¹	• Take diesel fuel sample
• Replace hydraulic reservoir breather filter	• Take hydraulic oil sample
• Replace auxiliary fuel filter and water separator—if equipped	• Check ride control accumulator
• Lubricate driveline upper and lower sliding joints and lower U-joints	
Every 1000 Hours	
• Clean engine crankcase vent tube	• Drain and refill park brake oil
• Replace engine air cleaner elements	• Replace air cleaner dust unloader valve
• Lubricate frame hinge pivots	• Clean hydraulic fan drive case drain in-line screen
• Check coolant	• Replace axle oil filters
Every 2000 Hours	
• Drain and refill transmission oil and replace filters ³	• Check and adjust electronic injector preload
• Drain and refill front and rear axle oil ⁴	• Check and adjust engine valve lash
• Clean front and rear axle oil recirculation screens	• Rerun transmission clutch calibration (advanced display unit)
• Replace outer pin seals	
Every 4000 Hours	
• Drain, flush, and refill hydraulic system oil	• Clean hydraulic system fill strainer
• Replace hydraulic system return filters	• Replace crankshaft damper
• Clean hydraulic pump case drain in-line screens	
Every 5000 Hours	
• Check driveline damper	
Every 6000 Hours	
• Drain and refill cooling system	