


WEAR PARTS OVERVIEW

90 Series Opener 1590, 1890, 1895 and 1990 CCS

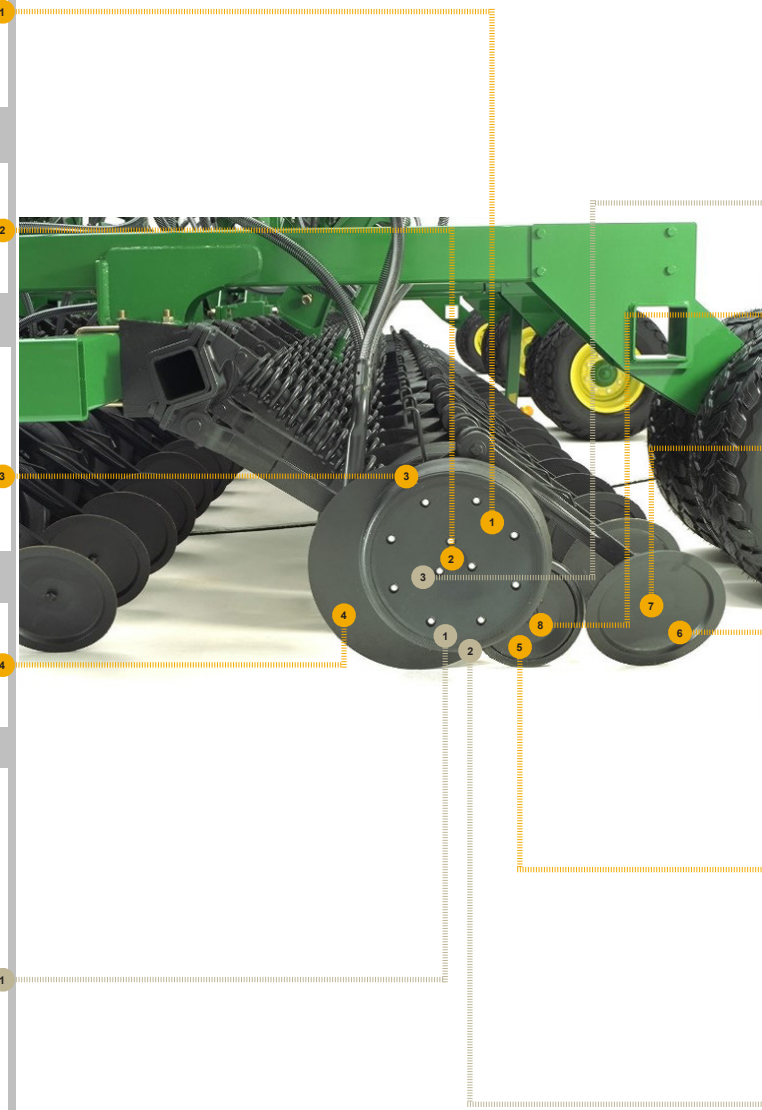

GAUGE WHEEL ASSEMBLIES
 Width (4.5") (Regular) [AA66604](#)
 Width (4.5") (Spoked) [AA98187](#)
 Width ((4.5") w/HD Tire & Bearing) (Spoked) [AA101966](#)
 Width (Narrow (3.0")) (Regular) [AA66988](#)
 Width (Narrow (3.0")) (Spoked) [AA98188](#)

GAUGE WHEEL BEARING
 (90 Series OE) [AN212132](#)
 (Heavy Duty) [AA97285](#)
 (Alternative) [A-AN212132](#)

GAUGE WHEEL TIRE
 Width (4.5") (Regular) [A84062](#)
 Width (4.5") (Heavy Duty) [A113507](#)
 Width (Narrow (3.0")) (Regular) [A85133](#)
 Width (Narrow (3.0")) (Alternative) [A-A85133](#)

OPENER BLADE
[N283804](#)
 Replace the disk when the diameter is less than 406 mm (16 in).

SEED BOOTS
 Orientation (Left) (Regular) [N284045](#)
 Orientation (Right) (Regular) [N284044](#)
 Orientation (Left) (Extended Wear) [N284025](#)
 Orientation (Right) (Extended Wear) [N284024](#)
 Orientation (Left) (ProSeries) [A109343](#)
 Orientation (Right) (ProSeries) [A109344](#)

*ProSeries - (Narrower causing less soil throw to neighboring rows).

(replace if bottom edge of seed boot is worn 12.7 mm (0.5 in) or more).

PROSERIES COMPONENTS CONVENIENCE KIT
 Contains:
 Closing Spring
 Seed Tab
 Press Wheel
 Serrated Closing Wheel
 Seed Boot
 Opener Blade
 Associated Hardware
 8 Row Kit (4 right / 4 left) [AA97392](#)
 2 Row Kit (1 right / 1 left) [AA98693](#)

DEPTH ADJUST ARM
[AA92485](#)

PRESS WHEEL BEARING
 (90 Series OE) [AN281357](#)

CLOSING WHEEL BEARING
 (90 Series OE) [AN212132](#)
 (Heavy Duty) [AA97285](#)
 (Alternative) [A-AN212132](#)

CLOSING WHEEL
 (90 Series OE) [N282110](#)
 (ProSeries) [A105392](#)
 (Serrated wheel for improved closing in hard soils and high residue).

PRESS WHEEL
 (90 Series OE) [AN282296](#)
 (ProSeries) [AA88056](#)
 (Narrow and Flexible for improved seed to soil contact).

SEED TAB
 (90 Series OE) [N219982](#)
 (ProSeries) [A105410](#)
 (Angled edge with more flexible material for increased service life).